 

 

 


 


 

 

 

 
 

 



 

 

 






 


 

 



 





 
 
 

 

 

 









Original	Substitut	Original	Substitut
	Standby		Power
	Auto		Smart / List
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	- / - -		Shift + Guide / EPG / - / - -
	0		0
	Back		Back / Return
	Vol +		Vol +
	Aspect		Shift + Picture / Format

Original	Substitut	Original	Substitut
	Ni cam / A2		Audi o / Lang I / II
	CH+		CH+ / Page+
	Vol -		Vol -
	Di spl ay		Di spl ay / Medi a
	CH-		CH- / Page-
	Up		Up
	Lef t		Lef t
	OK		OK
	Ri ght		Ri ght
	Menu		Menu / Home
	Down		Down
	Exi t		Exi t / Cancel / Clear
	Source		AV / Input / RDS
	P. Mde		Pi ctur e / For nat
	S. Mde		Sound / Ti tle
	Sl eep		Sl eep / Ti mer
	Fav		Fav / Marker / PC





Original	Substitut
 Fav-	 Shift + Down
 Fav+	 Shift + Up
 EPG	 Gui de / EPG / - / -
 Text	 Text / Got o
 Hbl d	 Shi ft + St op /
 Lang	 Shi ft + Audi o / Lang I/II
 Subt itle	 Subt itle / EQ
 I ndex	 Shi ft + Pl ay /
 Si ze	 Zoom / Si ze
 Reveal	 Shi ft + Pause / Step /
 Subpage	 Shi ft + Rec / Rec Mde
 Medi a	 Shi ft + Di spl ay / Medi a
 Pl ay	 Pl ay / Sl ow
 Pause	 Pause / Step / Freeze
 <<	 << / Tune-
 >>	 >> / Tune+
 Rec	 Rec / Rec Mde

Original	Substitut
 St op	 St op / Hol d
 I <<	 I << / Preset -
 >>	 >> / Preset +
 Tv/ Radi o	 TV/ Radi o /
 Red	 Red / Netfli x / Search
 Green	 Green / APP / Repeat
 Yel low	 Yel low / You Tube / Repeat
 Bl ue	 Bl ue / Pri me Vi deo / Random

