




 





 


 





 

 
 











 









Original	Substitut
 Power	 Power
 TV	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Enter	 Smart
 PRE-CH	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

Original	Substitut
 Source	 AV
 P+	 Ch +
 P-	 Ch -
 CH List	 List
 Menu	 Menu
 FAV CH	 Shift + Pre Ch
 Tools	 Options
 Return	 Back
 Info	 Info
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Red	 Red
 Green	 Green





Original	Substitut	Original	Substitut
 Yellow	 Yellow		
 Blue	 Blue		
 TTX/Mix	 Text		
 Media.P	 Media		
 P.Size	 Format		
 Dual	 Dual		
 Guide	 Guide		
 Subt.	 Subt		
 <<	 <<		
 Pause	 Pause		
 >>	 >>		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		

