

 
 
 
 
 

 
 
 
 
 
 
 

 
 
 

 
 


 
 



 
 

 

 













Original	Substitut	Original	Substitut
 Power	 Power	 Sound	 Dual
 CD	 1	 Display	 Info
 Bluetooth/Pairing	 2	 Prog	 Sleep
 FM	 3	 Sleep/Timer	 AV
 USB/Audio In	 4	 Clock/Scan	 Media
 I<<	 I<<		
 Play	 Play		
 Pause	 Pause		
 >>I	 >>I		
 Stop	 Stop		
 ><	 Guide		
 Recall	 Pre Ch		
 Album/Preset +	 Ch +		
 Album/Preset -	 Ch -		
 Vol+	 Vol +		
 Vol-	 Vol -		
 Mute	 Mute		

