







Original		Substitut		Original		Substitut	
	Info		Info / Angle		0		0
	Power		Power		Blue/Video		Shift + 4
	TV		TV/Radio /		Blue/Video		Blue / Prime Video / Random
	AV		AV / Input / RDS		Yellow/Sound		Sound / Title
	R		Shift + TV/Radio / Program		Yellow/Sound		Yellow / YouTube / Repeat
	F1		Shift + 1		PR+		CH+ / Page+
	F2		Shift + 2		Up		Up
	F3		Shift + 3		White		Fav / Marker / PC
	1		1		Left		Left
	2		2		OK		OK
	3		3		Right		Right
	4		4		Green/Timer		Sleep / Timer
	5		5		Green/Timer		Green / APP / Repeat
	6		6		PR-		CH- / Page-
	7		7		Down		Down
	8		8		Red/Recall		Back / Return
	9		9		Red/Recall		Red / Netflix / Search





	Original	Substitut	Original	Substitut
	Vol+	 Vol+		
	Vol-	 Vol-		
	Mute	 Mute / Dimmer		
	Pause	 Pause / Step / Freeze		
	Exit	 Exit / Cancel / Clear		
	Text	 Text / Goto		
	EPG	 Guide / EPG / -/--		
	Menu	 Menu / Home		

