 















Original	Substitut	Original	Substitut
 Power	 Power	 Menu	 Menu / Home
 Mute	 Mute / Dimmer	 Up/PR+	 Up
 1	 1	 PR+	 CH+ / Page+
 2	 2	 List	 Smart / List
 3	 3	 Vol-	 Vol-
 4	 4	 Left	 Left
 5	 5	 OK	 OK
 6	 6	 Right	 Right
 7	 7	 Vol+	 Vol+
 8	 8	 Sleep	 Sleep / Timer
 9	 9	 Down/PR-	 Down
 *(Left)	 Shift + Left	 PR-	 CH- / Page-
 0	 0	 P<P	 Back / Return
 *(Right)	 Shift + Right	 Tv/AV	 AV / Input / RDS
 []/Picture	 Picture / Format	 Tv/PC	 TV/Radio /
 /j/Sound	 Sound / Title	 [<>]/ARC	 Shift + Picture / Format
 I-II	 Audio / Lang I/II	 Red	 Red / Netflix / Search

Original	Substitut	Original	Substitut
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
 www.mandis.tv			





Original	Substitut	Original	Substitut
Green	Green / APP / Repeat	*(Down)	+ Shift + Down
Yellow	Yellow / YouTube / Repeat	PIP PR-	+ Shift + CH- /
Blue	Blue / Prime Video / Random		
[=]/Text	Text / Goto		
[.=]/Mix	+ Shift + Text /		
[=◇]/Size	Zoom / Size		
[=i]/Index	Info / Angle		
[=x]/Update	Rec / Rec Mode		
[=o]/Time	Pause / Step / Freeze		
[=?]/Reveal	Play / Slow		
[=+]/Hold	Stop / Hold		
[■]/PIP	Display / Media		
[:■]/Input	+ Shift + AV / Input / RDS		
[/■]/Swap	+ Shift + Back / Return		
PIP PR+	+ Shift + CH+ /		
[-■]/Position	+ Shift + Display / Media		
[=.] / Mode	+ Shift + Smart / List		

Original	Substitut	Original	Substitut
*(Down)	+ Shift + Down		
PIP PR-	+ Shift + CH- /		

