





Original	Substitut	Original	Substitut
 Power	 Power	 Play	 Play / Slow
 Eject	 Eject / Surround	 <<	 << / Tune-
 Tv/Radio	 TV/Radio /	 >>	 >> / Tune+
 Red/Goto	 Red / Netflix / Search	 D.Setup	 Setup / OPT /
 Green/Angle	 Green / APP / Repeat	 Rec	 Rec / Rec Mode
 Yellow/Repeat	 Yellow / YouTube / Repeat	 Stop	 Stop / Hold
 Blue/A-B	 Blue / Prime Video / Random	 I<<	 I<< / Preset-
 FAV	 Fav / Marker / PC	 >>I/Index	 >>I / Preset+
 Text	 Text / Goto	 Menu	 Menu / Home
 Hold/Freeze	 Shift + Stop /	 Up	 Up
 D.Menu/Guide	 D.Menu / Top	 Lang/Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ	 Left	 Left
 Zoom/Size	 Zoom / Size	 OK	 OK
 Aspect	 Shift + Picture / Format	 Right	 Right
 Subpage	 Smart / List	 Sleep	 Sleep / Timer
 Media	 Shift + Display / Media	 Down	 Down
 Pause	 Pause / Step / Freeze	 Title/Exit	 Exit / Cancel / Clear

Original	Substitut	Original	Substitut
 Play	 Play / Slow	 <<	 << / Tune-
 >>	 >> / Tune+	 D.Setup	 Setup / OPT /
 Rec	 Rec / Rec Mode	 Stop	 Stop / Hold
 I<<	 I<< / Preset-	 >>I/Index	 >>I / Preset+
 Menu	 Menu / Home	 Up	 Up
 Lang/Audio	 Audio / Lang I/II	 Left	 Left
 OK	 OK	 Right	 Right
 Sleep	 Sleep / Timer	 Down	 Down
 Title/Exit	 Exit / Cancel / Clear		



