



 

 

 

 
 
 

 

 
 





 


 


 








Original	Substitut
 Power Tv	 Power
 Power STB	 Shift + Power
 Source	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TTX/MIX	 Text
 PRE-CH	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -

Original	Substitut
 Mute	 Mute
 P+	 Ch +
 P-	 Ch -
 CH List	 List
 Menu	 Menu
 Smart Hub	 Smart
 Guide	 Guide
 Tools	 Options
 Info	 Info
 Return	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Red	 Red





Original	Substitut	Original	Substitut
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Search	 TV/R		
 Status	 Media		
 More	 3D		
 E-Manual	 D. Menu		
 Recommend	 Format		
 AD/Subt	 Subt		
 >>	 >>		
 <<	 <<		
 >>	 >>		
 <<	 <<		
 Pause	 Pause		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		

