

 








 







 
 


Original	Substitut	Original	Substitut
	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TTX/MIX		Text / Goto
	0		0
	Pre-CH		Back / Return
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+

Original	Substitut	Original	Substitut
	Vol-		Vol-
	CH List		Smart / List
	P-		CH- / Page-
	Media.P		Display / Media
	Menu		Menu / Home
	Guide		Guide / EPG / -/-
	Tools		Setup / OPT /
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Return		Shift + Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat





Original	Substitut
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 E-Manual	 D.Menu / Top
 3D	 Shift + 3
 AD/Subt.	 Subtitle / EQ
 AD/Subt.	 Audio / Lang I/II
 Stop	 Stop / Hold
 <</I<<	 << / Tune-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>/>>I	 >> / Tune+

Original	Substitut

