








 

 

 

 

 



 



 












 





Original	Substitut
	 Eject / Surround
	 Power
	 AV / Input / RDS
	 D.Menu / Top
	 Exit / Cancel / Clear
	 Mute / Dimmer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 +  Shift + Guide / EPG / -/-

Original	Substitut
	 Setup / OPT /
	 Back / Return
	 Up
	 Fav / Marker / PC
	 Left
	 OK
	 Right
	 Sleep / Timer
	 Down
	 Rec / Rec Mode
	 Pause / Step / Freeze
	 Play / Slow
	 Stop / Hold
	 Vol-
	 Vol+
	 CH- / Page-
	 CH+ / Page+



