


 



 

 
 
 








 
 



 






 




 
 
 

 
 



 
 

 

 







 


 





 




Original	Substitut	Original	Substitut
 Power	 Power	 S.Std	 Dual
 Sleep	 Sleep	 Menu ATV	 Menu
 Mute	 Mute	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 OK	 Ok
 5	 5	 Vol +	 Vol +
 6	 6	 Vol -	 Vol -
 7	 7	 Program +	 Ch +
 8	 8	 Program -	 Ch -
 9	 9	 Freeze / Eject	 Eject
 0	 0	 Info / Display	 Info
 -/--	 Shift + Guide	 Menu DVB	 D. Menu
 Recall	 Back	 I / II	 Shift + Dual
 Source	 AV	 TTX / Play / Pause	 Text
 P.Std	 Format	 TTX / Play / Pause	 Play

Original	Substitut	Original	Substitut
 MUTE	 MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 PLAY MODE	 REC MODE	 TV	 DUAL
 LIST	 SOUND	 SUBT	 OPT
 DISC NAV	 AD	 PICTURE	 ECO
 SLEEP	 TV/R	 FORMAT	 3D
 E-MANUAL	 REPEAT	 ZOOM	 TIMER
 D.MENU	 TEXT	 AV	
 TOP MENU	 DISPLAY	 MENU	 INFO
 OK	 OK	 CLEAR	 RETURN
 EXIT	 BACK	 VOL +	 CH +
 HOME	 SMART	 VOL -	 CH -
 APP	 MEDIA	1	2
1	2	3	4
2	3	5	6
3	4	7	8
4	5	8	9
5	6	9	FAV
6	7	0	PRE-CH
7	8	GUIDE	A
8	9	0	B
9	FAV	A	C
0	PRE-CH	B	D
GUIDE	A	C	D
A	B		





Original	Substitut	Original	Substitut
 Exit / Stop	 Stop		
 Exit / Stop	 CLEAR EXIT		
 EPG / Title	 -/-- GUIDE		
 FAV	 FAV PRE-CH		
 TV / R	 SEARCH TV/R		
 Sub	 AD SUBT		
 Aspect	 ECO 3D		
 Mix / A-B	 APP MEDIA		
 Red	 A		
 I<<	 <<		
 Green	 B		
 >>I	 >>I		
 Yellow	 C		
 <<	 <<		
 Blue	 D		
 >>	 >>		

