



 

 
 


 

 

 

 

 





 

 

 

 

 







Original	Substitut
 Power	 Power
 Mute	 Mute / Dimmer
 Direct Tv Rec	 Eject / Surround
 Guide	 Guide / EPG / -/--
 Up	 Up
 Tv/Av	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [=]/Text	 Text / Goto

Original	Substitut
 [=◇]/F.P.	 Shift + Red / Netflix /
 [=i]/Index	 Shift + Green / APP /
 [=+]/Hold	 Shift + Yellow / YouTube /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 C	 Back / Return
 0/VCR	 0
 i	 Info / Angle
 CH+	 CH+ / Page+
 Vol+	 Vol+





Original	Substitut
	CH- / Page-
	Vol-
	Picture / Format
	Fav / Marker / PC
	Shift + Mute / Dimmer
	Shift + Power
	Shift + Rec / Rec Mode
	Rec / Rec Mode
	Shift + Display / Media
	Display / Media
	Shift + Smart / List
	Smart / List
	Shift + Fast
	Fast / Preset-
	Fast / Tune-
	Shift + Fast / Preset-
	Shift + Fast

Tune+

Original	Substitut
	Fast / Tune+
	Fast / Preset+
	Shift + Fast / Preset+
	Shift + Stop /
	Stop / Hold
	Shift + Pause / Step /
	Pause / Step / Freeze
	Shift + Play /
	Play / Slow

