



 


 


 









Original	Substitut	Original	Substitut
	Power		Power
	Disc		Media
	Subtitle		Subt
	Angle		TV/R
	Zoom		Eject
	Audio		Dual
	Disc Menu		D. Menu
	Setup		Options
	Return/Title		Back
	Display		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	I<<		I<<
	Play		Play

Original	Substitut	Original	Substitut
	>>I		>>I
	Pause		Pause
	Stop		Stop
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Program		Sleep



 
 
 

 



 

 

 


 

 



 


Original	Substitut	Original	Substitut
 Repeat	 Text		
 Surr.	 Red		
 Sound	 +  Shift + Dual		
 Vocal	 Yellow		
 Karaoke	 Blue		











 

 










 
 
 
Original	Substitut	Original	Substitut
	Power		Power
	Tuner		Media
	Display		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	I<<		I<<
	Play		Play
	>>I		>>I
	Stop		Stop
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	1		1
	2		2

Original	Substitut	Original	Substitut
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Program		Sleep
	Surr.		Red
	Sound		Dual





 
 
 

 



 

 

 


 

 



 
Original	Substitut	Original	Substitut
	Power		Power
	TV		Media
	Setup		Options
	Display		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	I<<		I<<
	Play		Play
	>>I		>>I
	Stop		Stop
	Tv Vol+		Vol +
	Tv Vol-		Vol -
	Mute		Mute
	1		1

Original	Substitut	Original	Substitut
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Surr.		Red
	Sound		Dual





Original	Substitut	Original	Substitut
	Power		Power
	AUX/DI		Media
	Display		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	I<<<		I<<<
	Play		Play
	>>>I		>>>I
	Stop		Stop
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	1		1
	2		2

Original	Substitut	Original	Substitut
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Program		Sleep
	Surr.		Red
	Sound		Dual

