


 



 

 

 





 

 
 



 


 



 






 











Original	Substitut	Original	Substitut
 Power	 Power	 Vol+	 Vol +
 Sleep	 Sleep	 Vol-	 Vol -
 CBL/SAT	 1	 Mute	 Mute
 Media Player	 2	 Info	 Info
 Blu-ray/DVD	 3	 Option	 Options
 Game	 4	 Back	 Back
 AUX	 5	 Setup	 Menu
 Tuner	 6	 Up	 Up
 USB	 7	 Down	 Down
 Tv Audio	 8	 Right	 Right
 CD	 9	 Left	 Left
 Bluetooth	 Guide	 Enter	 Ok
 Internet Radio	 0	 I<</Tune-	 I<<
 CH/Page+	 Pre Ch	 Play	 Play
 CH/Page-	 Ch +	 Pause	 Pause
 Eco	 Ch -	 >>I/Tune+	 >>I
	 3D	 Smart Select 1	 D. Menu





Original		Substitut		Original		Substitut	
SMART 2	Smart Select 2	REPEAT TEXT	Text				
SELECT 3	Smart Select 3	ZOOM ▲	Eject				
4	Smart Select 4	TIMER AV	AV				
MOVIE	Green/Movie	B	Green				
SOUND MUSIC	Red/Music	A	Red				
MODE GAME	Blue/Game	D	Blue				
PURE	Yellow/Pure	C	Yellow				

