








 




 


 



 
 




 
 



Original	Substitut	Original	Substitut
Power Tv	Power	Vol-	Vol -
Tv/Video	TV/R	Muting	Mute
CH+	Ch +		
CH-	Ch -		
1	1		
2	2		
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
0	0		
10/Tv Return	Guide		
+10/100+	Pre Ch		
Vol+	Vol +		

Original	Substitut	Original	Substitut
Vol-	Vol -	Vol-	Vol -
Muting	Mute	Mute	Mute





Original		Substitut		Original		Substitut	
	Power Audio		Power		Down		Down
	1		1		Right/Preset Up		Right
	2		2		Left/Preset Down		Left
	3		3		Muting		Mute
	4		4		Menu/PL		Menu
	5		5		Top Menu/PG	 + 	Shift + Menu
	6		6		On Screen		3D
	7		7		Back / Rec		Rec
	8		8		Stop / Memory		Stop
	9		9		Play		Play
	0		0		Pause/FM Mode		Pause
	10 / Tv Return		Guide		I<</Tuning-		I<<
	+10 / 100+		Pre Ch		>>I/Tuning+		>>I
	CH+		Ch +		<</Slow-		<<
	CH-		Ch -		>>/Slow+		>>
	Up		Up		Audio		Dual
	Enter		Ok		Angle	 + 	Shift + 3D





Original	Substitut		
ZOOM SUBTITLE	Zoom	ZOOM	Eject
ZOOM SUBTITLE	Subtitle	AD SUBT	Subt
TV VOL	Vol+	+ VOL	Vol +
VOL	Vol-	VOL -	Vol -
REPEAT	Repeat	REPEAT TEXT	Text
PAGE	Page	DISC NAV LIST	List
SURROUND	Surround	HOME SMART	Smart
PTY SEARCH	PTY Search	TIMER AV	AV
TA/News/Info	TA/News/Info	DISPLAY INFO	Info
PTY SE	PTY Select-	SHIFT + [Left Arrow]	Shift + Left
SELECT-Φ	PTY Select+	SHIFT + [Right Arrow]	Shift + Right
LEVEL	Level+	SHIFT + [Up Arrow]	Shift + Up
LEVEL	Level-	SHIFT + [Down Arrow]	Shift + Down
SLEEP	Sleep	PROG SLEEP	Sleep
RETURN	Return	RETURN BACK	Back
DISPLAY	Display	SHIFT + DISPLAY INFO	Shift + Info
PLAY MODE	Play Mode	PICTURE FORMAT	Format

Original	Substitut		
STB CONT	STB Control	SHIFT + HOME SMART	Shift + Smart
DIMMER	Dimmer	SHIFT + APP MEDIA	Shift + Media
USB MEMORY	USB Memory	APP MEDIA	Media
CANCEL	Cancel	CLEAR EXIT	Exit
DVD	DVD	D	Blue
iPod	iPod	A	Red
	FM/AM	B	Green
VIDEO VCR CONTROL	VCR/Video Control	C	Yellow
TV/VIDEO	Tv/Video	SEARCH TV/R	TV/R
SET UP	Set Up	E-MANUAL D.MENU	D. Menu
SPK LEVEL	SPK Level	SHIFT + TIMER AV	Shift + AV
SETTING	Setting	SETTINGS OPT	Options
TREBLE/BASS	Treble/Bass	SHIFT + PROG SLEEP	Shift + Sleep
TITLE/GROUP	Title/Group	SHIFT + DISC NAV LIST	Shift + List
SCAN MODE VFP	VFP/Scan Mode	SHIFT + SETTINGS OPT	Shift + Options
	Tv Sound	SHIFT + SOUND DUAL	Shift + Dual





	Original	Substitut	Original	Substitut
	Power VCR/STB		Power	
	1		1	
	2		2	
	3		3	
	4		4	
	5		5	
	6		6	
	7		7	
	8		8	
	9		9	
	0		0	
	Tv/Video		TV/R	
	CH+		Ch +	
	CH-		Ch -	
	Vol+		Vol +	
	Vol-		Vol -	
	Muting		Mute	

