





 









 

 

 


 

 

 













 

 

 

Original	Substitut	Original	Substitut
Guide	Guide / EPG / -/--		Play
Power	Power		Pause
Eject	Eject / Surround		<< / Tune-
Tv/Radio	TV/Radio /		>> / Tune+
Red/Goto	Red / Netflix / Search	D.Setup	Setup / OPT /
Green/Angle	Green / APP / Repeat	Rec	Rec / Rec Mode
Yellow/Repeat	Yellow / YouTube / Repeat	Stop	Stop / Hold
Blue/A-B	Blue / Prime Video / Random		I<< / Preset-
FAV	Fav / Marker / PC		>>I/Index
Text	Text / Goto	Menu	Menu / Home
Freeze/Hold	Shift + Pause / Step /	Lang/Audio	Audio / Lang I/II
D.Menu	D.Menu / Top		Up
Subtitle	Subtitle / EQ		Left
Zoom/Size	Zoom / Size		OK
Aspect	Shift + Picture / Format		Right
Subpage	Info / Angle	Sleep	Sleep / Timer
Media	Shift + Display / Media		Down

Original	Substitut	Original	Substitut
	Play / Slow		TV
	Pause / Step / Freeze		DVD
	<< / Tune-		SAT
	>> / Tune+		AUX
	Setup / OPT /		SLOW STEP-FREEZE HOLD REC MODE
Rec	Rec / Rec Mode		TUNE- TUNE+ PRESET- PRESET+
Stop	Stop / Hold		TITLE LANG I/II EQ SURROUND
	I<< / Preset-		SOUND AUDIO SUBTITLE PROGRAM
	>>I/Index		FORMAT SIZE TIMER PROGRAM
Menu	Menu / Home		PICTURE ZOOM SLEEP TV RADIO
Lang/Audio	Audio / Lang I/II		TOP MENU OPT-TOOLS GOTO RDS
	Up		D.MENU SETUP TEXT AV INPUT
	Left		HOME ANGLE MENU INFO
	OK		CLEAR EXIT CANCEL LIST SMART MEDIA CH PAGE
	Right		VOL + -
Sleep	Sleep / Timer		TV DVD CD-STB
	Down		VIDEO TAPE TUNER
			AUX-HDD USB BLUETOOTH
			GUIDE EPG
			NETFLIX APP YouTube Prime Video
			SEARCH REPEAT REPEAT A-B RANDOM





Original	Substitut
	EXIT / Cancel / Clear
	Exit / Cancel / Clear
	Vol+
	Vol+
	Mute / Dimmer
	Mute / Dimmer
	CH+ / Page+
	CH+ / Page+
	Vol-
	Vol-
	Display / Media
	Display / Media
	CH- / Page-
	CH- / Page-
	1
	1
	2
	2
	3
	3
	4
	4
	5
	5
	6
	6
	7
	7
	8
	8
	9
	9
	Shift + Guide / EPG / -/--
	Shift + Guide / EPG / -/--

Original	Substitut
	0
	0
	Back / Return
	Back / Return
	AV / Input / RDS
	AV / Input / RDS
	Picture / Format
	Picture / Format
	Sound / Title
	Sound / Title

