















 



 







 













 

 

 

Original	Substitut	Original	Substitut
Guide	Guide / EPG / -/--		Play
Power	Power		Pause
Eject	Eject / Surround		<< / Tune-
Tv/Radio	TV/Radio /		>> / Tune+
Red/Goto	Red / Netflix / Search	D.Setup	Setup / OPT /
Green/Angle	Green / APP / Repeat	Rec	Rec / Rec Mode
Yellow/Repeat	Yellow / YouTube / Repeat	Stop	Stop / Hold
Blue/A-B	Blue / Prime Video / Random	I<<	I<< / Preset-
FAV	Fav / Marker / PC	>>I/Index	>>I / Preset+
Text	Text / Goto	Menu	Menu / Home
Freeze/Hold	Shift + Pause / Step /	Lang/Audio	Audio / Lang I/II
D.Menu	D.Menu / Top		Up
Subtitle	Subtitle / EQ		Left
Zoom/Size	Zoom / Size		OK
Aspect	Shift + Picture / Format		Right
Subpage	Info / Angle		Sleep
Media	Shift + Display / Media		Down

Original	Substitut	Original	Substitut
	Play / Slow		Play / Slow
	Pause / Step / Freeze		Pause / Step / Freeze
	<< / Tune-		<< / Tune-
	>> / Tune+		>> / Tune+
	Setup / OPT /		Setup / OPT /
	Rec / Rec Mode		Rec / Rec Mode
	Stop / Hold		Stop / Hold
	I<< / Preset-		I<< / Preset-
	>>I / Preset+		>>I / Preset+
	Menu / Home		Menu / Home
	Audio / Lang I/II		Audio / Lang I/II
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Sleep		Sleep / Timer
	Down		Down





Original	Substitut
	EXIT / Cancel / Clear
	Exit / Cancel / Clear
	Vol+
	Vol+
	Mute / Dimmer
	Mute / Dimmer
	CH+ / Page+
	CH+ / Page+
	Vol-
	Vol-
	Display / Media
	Display / Media
	CH- / Page-
	CH- / Page-
	1
	1
	2
	2
	3
	3
	4
	4
	5
	5
	6
	6
	7
	7
	8
	8
	9
	9
	Shift + Guide / EPG / -/--
	Shift + Guide / EPG / -/--

Original	Substitut
	0
	0
	Back / Return
	Back / Return
	AV / Input / RDS
	AV / Input / RDS
	Picture / Format
	Picture / Format
	Sound / Title
	Sound / Title

