





































Original	Substitut
 Power	 Power
 Energy	 Display / Media
 Picture	 Picture / Format
 Sound	 Sound / Title
 Mute	 Mute / Dimmer
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 16:9/4:3	 Shift + Zoom /
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Substitut
 9	 9
 TTX	 Text / Goto
 0	 0
 Recall	 Back / Return
 Menu	 Menu / Home
 Up	 Up
 Input	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Info	 Info / Angle
 Vol+	 Vol+
 Home	 Shift + Menu /
 EPG/Hold	 Guide / EPG / -/-
 CH+	 CH+ / Page+





Original	Substitut
	Vol-
	Fav / Marker / PC
	Zoom / Size
	Smart / List
	CH- / Page-
	Play / Slow
	Stop / Hold
	<< / Tune-
	>> / Tune+
	Pause / Step / Freeze
	Shift + Goto / Text /
	I<< / Preset-
	>>I / Preset+
	Rec / Rec Mode
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat

Original	Substitut
	Blue / Prime Video / Random

