









 





 

 

 







 



 

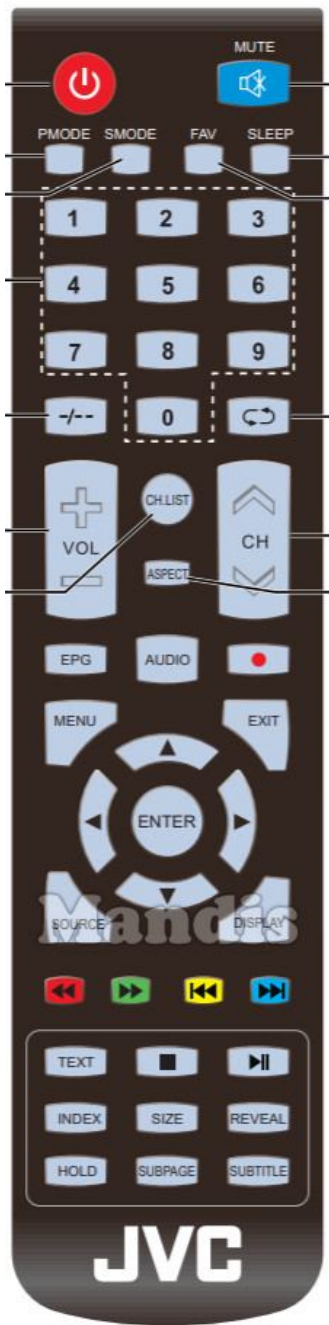 
 












 

 

| Original  | Substitut | Original  | Substitut                 |
|---|-----------|---|---------------------------|
|    | Power     |    | Power                     |
|    | Mute      |    | Mute / Dimmer             |
|    | P.Mode    |    | Picture / Format          |
|    | S.Mode    |    | Sound / Title             |
|    | FAV       |    | Fav / Marker / PC         |
|    | Sleep     |    | Sleep / Timer             |
|    | 1         |    | 1                         |
|    | 2         |    | 2                         |
|    | 3         |    | 3                         |
|    | 4         |    | 4                         |
|   | 5         |   | 5                         |
|  | 6         |  | 6                         |
|  | 7         |  | 7                         |
|  | 8         |  | 8                         |
|  | 9         |  | 9                         |
|  | 0         |  | Shift + Guide / EPG / -/- |
|  | 0         |  | 0                         |

| Original  | Substitut | Original  | Substitut                |
|---|-----------|---|--------------------------|
|    | Recall    |    | Back / Return            |
|    | Vol+      |    | Vol+                     |
|    | CH.List   |    | Smart / List             |
|    | CH+       |    | CH+ / Page+              |
|    | Vol-      |    | Vol-                     |
|    | Aspect    |    | Shift + Picture / Format |
|    | CH-       |    | CH- / Page-              |
|    | EPG       |    | Guide / EPG / -/-        |
|    | Audio     |    | Audio / Lang I/II        |
|    | Rec       |    | Rec / Rec Mode           |
|   | Menu      |   | Menu / Home              |
|  | Exit      |  | Exit / Cancel / Clear    |
|  | Up        |  | Up                       |
|  | Left      |  | Left                     |
|  | Enter     |  | OK                       |
|  | Right     |  | Right                    |
|  | Source    |  | AV / Input / RDS         |





| Original   | Substitut   |
|--|---|
|  Down     |  Down                        |
|  Display  |  Display / Media             |
|  Red      |  Red / Netflix / Search      |
|  <<       |  << / Tune-                  |
|  Green    |  Green / APP / Repeat        |
|  >>       |  >> / Tune+                  |
|  Yellow   |  Yellow / YouTube / Repeat   |
|  I<<      |  I<< / Preset-               |
|  Blue     |  Blue / Prime Video / Random |
|  >>I      |  >>I / Preset+               |
|  Text     |  Text / Goto                 |
|  Stop   |  Stop / Hold               |
|  Play   |  Play / Slow               |
|  Pause  |  Pause / Step / Freeze     |
|  Index  |  D.Menu / Top              |
|  Size   |  Zoom / Size               |
|  Reveal |  Shift + Back / Return     |

| Original   | Substitut  |
|--|--|
|  Hold     |  Shift + Stop / |
|  Subpage  |  Setup / OPT /  |
|  Subtitle |  Subtitle / EQ  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |

