



 







 

 
 

 


















 



 



 



 



 

 

 















Original		Substitut		Original		Substitut	
	Power		Power		Up		Up
	EPG		Guide / EPG / -/-		Display		Display / Media
	REP		TV/Radio /		Left		Left
	Mute		Mute / Dimmer		OK		OK
	Rec List		Shift + Rec / Rec Mode		Right		Right
	CH List		Smart / List		Menu		Menu / Home
	Subtitle		Subtitle / EQ		Down		Down
	Eject		Eject / Surround		Exit		Exit / Cancel / Clear
	Rec		Rec / Rec Mode		1		1
	Stop		Stop / Hold		2		2
	I<<		I<< / Preset-		3		3
	>>I		>>I / Preset+		4		4
	Pause		Pause / Step / Freeze		5		5
	Play		Play / Slow		6		6
	<<		<< / Tune-		7		7
	>>		>> / Tune+		8		8
	Source		AV / Input / RDS		9		9





Original		Substitut		Original		Substitut	
0	0	HDMI - BAT	0	REVEAL	Title / Reveal	SHIFT + TITLE	Shift + Sound / Title
[Return]	Recall	RETURN	Back / Return	PRO	PRO	SHIFT + MEDIA	Shift + Display / Media
FAV	Fav	PC FAV MARKER	Fav / Marker / PC	HOLD	LAN / Hold	SHIFT + LIST	Shift + Smart / List
VOL	Vol +	VOL	Vol+	SIZE	Size / A-B	SIZE	Zoom / Size
PICTURE	Picture	FORMAT	Picture / Format	SUBPAGE	Goto / Subpage	GOTO	Text / Goto
NICAM/A2	Nicam / A2	LANG / I / II	Audio / Lang I/II	INDEX	Index / Slow	ANGLE	Info / Angle
CH	CH +	CH PAGE	CH+ / Page+				
VOL	Vol -	VOL	Vol-				
SOUND	Sound	TITLE	Sound / Title				
SLEEP	Sleep	TIMER	Sleep / Timer				
CH	CH -	CH PAGE	CH- / Page-				
[Red]	Red	NETFLIX	Red / Netflix / Search				
[Green]	Green	APP	Green / APP / Repeat				
[Yellow]	Yellow	YouTube	Yellow / YouTube / Repeat				
SCREEN	Blue / Screen	Prime Video	Blue / Prime Video / Random				
TV/TXT	Setup / TV/Txt	OPT-TOOLS	Setup / OPT /				
CANCEL	D-Menu /	TOP MENU	D.Menu / Top				



Cancel Menu