



Original	Substitut	Original	Substitut
	1		1
	2		2
	3		3
	Power		Power
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide / EPG / -/--
	Loudness/Down		CH- / Page-
	Up Page/PTY		CH+ / Page+
	Set Up		Setup / OPT /
	Sound		Sound / Title
	Listen Mode		Smart / List
	RDS Display		Display / Media
	Left P.Call/ </>		I<< / Preset-
	Up Multi Control		Up
	Right P.Call		>>I / Preset+
	Down Multi		Down
	<< Tuning		<< / Tune-
	>> Tuning		>> / Tune+
	Play Reverse		Left
	Play/Pause / Band		Play / Slow
	Play/Pause / Band		Pause / Step / Freeze
	Bass Boost		Audio / Lang I/II
	A/B / +100 / Disc Skip		Fav / Marker / PC
	Auto / Stop		Stop / Hold
	DVD		Shift + 2
	AUX		Shift + 7
	CD/DVD		Shift + 3
	Tuner		Shift + 6



 










































 










	Original	Substitut	Original	Substitut
	MD/Tape	+ 5		Shift + 5
	Video1	+ 4		Shift + 4
	Video 2	+ 8		Shift + 8
	Active EQ			Subtitle / EQ
	Tone			Eject / Surround
	Mute			Mute / Dimmer
	Vol-			Vol-
	Vol+			Vol+





Original	Substitut	Original	Substitut
 DVD Power	 Power	 Up	 Up
 1	 1	 Right/>>>I	 >>I / Preset+
 2	 2	 Down	 Down
 3	 3	 << Tuning	 << / Tune-
 4	 4	 >> Tuning	 >> / Tune+
 5	 5	 Enter	 OK
 6	 6	 Play/Pause	 Play / Slow
 7	 7	 Stop	 Stop / Hold
 8	 8	 Pause	 Pause / Step / Freeze
 9	 9		
 0	 0		
 +10	 Guide / EPG / -/--		
 Menu	 Menu / Home		
 OSD	 Display / Media		
 Return	 Back / Return		
 Top Menu	 D.Menu / Top		
 Left/I<<<	 I<< / Preset-		

