


 

 

 












 
 
 
 

 

 

 

 





 



 


 




 





 




 

















 


 


Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute
	[]		TV/R
	Sound		Dual
	*		Options
	Source		AV
	[X]		Format
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[i+]/[?]		Info
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[≡]/Text		Text
	-/--/Recall		Pre Ch
	Guide		Guide
	Up		Up
	OK		Ok
	Down		Down
	Right		Right
	Left		Left
	Prog+		Ch +
	Prog-		Ch -
	Vol+		Vol +
	Vol-		Vol -





Original	Substitut
 Menu	 Menu
 [+]	 3D
 ≡	 Smart
 Power	 Shift + Power
 1 AUX/Video	 Shift + 1
 2 AUX/Video	 Shift + 2
 3 AUX/Video	 Shift + 3
 4 AUX/Video	 Shift + 4
 5 AUX/Video	 Shift + 5
 6 AUX/Video	 Shift + 6
 7 AUX/Video	 Shift + 7
 8 AUX/Video	 Shift + 8
 9 AUX/Video	 Shift + 9
 0 AUX/Video	 Shift + 0
 --- AUX/Video	 Shift + Pre Ch
 Up AUX/Video	 Shift + Up
 Down	 Shift + Down

Original	Substitut
 Right	 Shift + Right
 Left AUX/Video	 Shift + Left
 OK AUX/Video	 Shift + Ok
 Prog+	 Shift + Ch +
 Prog-	 Shift + Ch -
 Rec AUX/Video	 Rec



AUX/Video