











 

 

 

 

 



 

 

 





 








 
 

























| Original  | Substitut     | Original  | Substitut             |
|---|---------------|---|-----------------------|
|      | Power         |      | Power                 |
|      | i             |      | Info / Angle          |
|      | Analog Menu   |      | Menu / Home           |
|      | Digital Menu  |      | D.Menu / Top          |
|      | 1             |      | 1                     |
|      | 2             |      | 2                     |
|      | 3             |      | 3                     |
|      | Input Select  |      | AV / Input / RDS      |
|      | 4             |      | 4                     |
|      | 5             |      | 5                     |
|     | 6             |     | 6                     |
|    | TV/DVB-T      |    | Display / Media       |
|    | 7             |    | 7                     |
|    | 8             |    | 8                     |
|    | 9             |    | 9                     |
|    | Guide (EPG)   |    | Guide / EPG / -/-     |
|    | Timer         |    | Sleep / Timer         |
|    | 0             |    | 0                     |
|    | Mute          |    | Mute / Dimmer         |
|    | Exit          |    | Exit / Cancel / Clear |
|    | Vol+          |    | Vol+                  |
|    | Up            |    | Up                    |
|    | P+            |    | CH+ / Page+           |
|    | Left          |    | Left                  |
|    | Enter/CH List |    | OK                    |
|    | Enter/CH List |    | Smart / List          |
|    | Right         |    | Right                 |
|   | Vol-          |   | Vol-                  |
|  | Down          |  | Down                  |
|  | P-            |  | CH- / Page-           |
|  | TV/Radio      |  | TV/Radio /            |
|  | [≡]           |  | Text / Goto           |
|  | [≡o] [≡o]/P↔P |  | Back / Return         |
|  | Picture Size  |  | Picture / Format      |



