


 



 
 




 
 
 
 

 
 

 





 













 



 


 




 

 
 
 



 



 

 



 


 






Original		Substitut		Original		Substitut	
	Power		Power		Back		Back
	[≡i]/Info		Info		Exit		Exit
	Mute		Mute		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Left		Left
	4		4		Enter		Ok
	5		5		Vol+		Vol +
	6		6		Vol-		Vol -
	7		7		CH+		Ch +
	8		8		CH-		Ch -
	9		9		List		List
	0		0		Sleep		Sleep
	[≡?]/Source		AV		EPG		Guide
	OOI/II/Audio		Dual		♥/FAV		Pre Ch
	Menu		Menu		Red		Red
	[≡♦]/[++]		3D		Green		Green





Original	Substitut	Original	Substitut
	Yellow		Yellow
	Blue		Blue
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	Play		Play
	Pause		Pause
	Stop		Stop
	[≡]		Text
	Time Shift		Media
	[≡o]		Format
	Radio		TV/R
	[≡x]		Subt
	DMP		Options
	Index		Smart
	Rec		Rec

