



Original	Substitut
 Power	 Power
 Mute	 Mute / Dimmer
 Anyview Cast	 Shift + Up
 Anyview Cast Off	 Shift + Down
 TV	 TV/Radio /
 Source	 AV / Input / RDS
 I<<	 I<< / Preset-
 Stop	 Stop / Hold
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 DMP	 Display / Media
 Pause	 Pause / Step / Freeze
 FAV	 Fav / Marker / PC
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat

Original	Substitut
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Menu	 Menu / Home
 HiSmart	 Smart / List
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Shift + Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 CH.List	 Shift + Smart / List
 CH+	 CH+ / Page+
 Vol-	 Vol-
 EPG	 Guide / EPG / -/-
 CH-	 CH- / Page-





Original		Substitut		Original		Substitut	
1	1	TV 1	1	TEXT	Text	GOTO TEXT	Text / Goto
2	2	DVD 2	2	INDEX	Index	TOP MENU D.MENU	D.Menu / Top
3	3	CD - STB 3	3	SUB PAGE	Subpage	OPT-TOOLS SETUP	Setup / OPT /
4	4	VIDEO 4	4				
5	5	TAPE 5	5				
6	6	TUNER 6	6				
7	7	AUX - HDD 7	7				
8	8	USB 8	8				
9	9	BLUETOOTH 9	9				
INFO	Info	ANGLE INFO	Info / Angle				
0	0	HDMI - BAT 0	0				
PRE CH	PRE-CH	RETURN BACK	Back / Return				
I/II LANG.	Lang/I-II	LANG I/II AUDIO	Audio / Lang I/II				
P.MODE	P.Mode	FORMAT PICTURE	Picture / Format				
S.MODE	S.Mode	TITLE SOUND	Sound / Title				
SIZE	Size	SIZE ZOOM	Zoom / Size				
SUBT.	Subt.	EQ SUBTITLE	Subtitle / EQ				

