





 

 
 
 
 
 
 
 
 
 








 

 

 














 
Original	Substitut
 Power	 Power
 Mute	 Mute
 Eject / Nicam	 Eject
 Recall / Goto	 Pre Ch
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TV Menu	 Menu
 Source	 AV
 Up	 Up

Original	Substitut
 Right	 Right
 Down	 Down
 Left	 Left
 Enter	 Ok
 DVD/DVB Menu	 D. Menu
 Exit	 Exit
 Vol +	 Vol +
 Vol -	 Vol -
 Sound	 Shift + Dual
 PIC	 Shift + Format
 CH +	 Ch +
 CH -	 Ch -
 Sleep	 Sleep
 Aspect	 Format
 Rad / DVD	 Options
 Recall / TV	 Back
 Text	 Text





Original		Substitut	
	Play/Pause / Info		Info
	Play/Pause / Info		Play
	Play/Pause / Info		Pause
	Stop / FAV	 + 	Shift + Pre Ch
	Stop / FAV		Stop
	EPG		Guide
	Red / DVD/USB		Red
	Green / Title		Green
	Yellow / PBC		Yellow
	Blue / Angle		Blue
	<< / Reveal		<<
	>> / Hold		>>
	<< / List		<<
	>>  / Index		>>
	Subpage		Media
	Display	 + 	Shift + Info
	Audio		Dual

Original		Substitut	
	Subtitle		Subt

