










 







 





 












 







 





 









 

 

 

 





 

 

 

 










 





Original	Substitut	Original	Substitut
 Standby	 Power	 Stop	 Stop / Hold
 1	 1	 Play/Pause	 Play / Slow
 2	 2	 Play/Pause	 Pause / Step / Freeze
 3	 3	 I>/Resume	 Shift + Play /
 4	 4	 Surround	 Eject / Surround
 5	 5	 Sound	 Sound / Title
 6	 6	 Night	 Shift + Sleep / Timer
 7	 7	 Mute	 Mute / Dimmer
 8	 8	 Repeat	 Green / APP / Repeat
 9	 9	 Repeat A-B	 Yellow / YouTube / Repeat
 0	 0	 Sleep	 Sleep / Timer
 Vol+	 Vol+	 DIM	 Shift + Mute / Dimmer
 Vol-	 Vol-	 Subw +	 Up
 Left	 Left	 Rear +	 Shift + CH+ /
 Right	 Right	 Center +	 CH+ / Page+
 I<<	 I<< / Preset-	 Tv Vol+	 Shift + Vol+
 >>I	 >>I / Preset+	 Subw -	 Down

Original	Substitut	Original	Substitut
 Stop	 Stop / Hold	 Stop	 Stop / Hold
 Play/Pause	 Play / Slow	 Play/Pause	 Play / Slow
 Play/Pause	 Pause / Step / Freeze	 Play/Pause	 Pause / Step / Freeze
 I>/Resume	 Shift + Play /	 I>/Resume	 Shift + Play /
 Surround	 Eject / Surround	 Surround	 Eject / Surround
 Sound	 Sound / Title	 Sound	 Sound / Title
 Night	 Shift + Sleep / Timer	 Night	 Shift + Sleep / Timer
 Mute	 Mute / Dimmer	 Mute	 Mute / Dimmer
 Repeat	 Green / APP / Repeat	 Repeat	 Green / APP / Repeat
 Repeat A-B	 Yellow / YouTube / Repeat	 Repeat A-B	 Yellow / YouTube / Repeat
 Sleep	 Sleep / Timer	 Sleep	 Sleep / Timer
 DIM	 Shift + Mute / Dimmer	 DIM	 Shift + Mute / Dimmer
 Subw +	 Up	 Subw +	 Up
 Rear +	 Shift + CH+ /	 Rear +	 Shift + CH+ /
 Center +	 CH+ / Page+	 Center +	 CH+ / Page+
 Tv Vol+	 Shift + Vol+	 Tv Vol+	 Shift + Vol+
 Subw -	 Down	 Subw -	 Down





	Original		Substitut	
	Rear -		Shift + CH- /	
	Center -		CH- / Page-	
	Tv Vol-		Shift + Vol-	







	Original		Substitut









 

 







 

 

 

 

 







 



Original	Substitut	Original	Substitut
	Standby		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Disc (DVD)		D.Menu / Top
	0		0
	Vol+		Vol+
	System (DVD)		Menu / Home
	Vol-		Vol-
	I<<		I<< / Preset-
	>>I		>>I / Preset+

Original	Substitut	Original	Substitut
	Stop		Stop / Hold
	Play/Pause		Play / Slow
	I>/Resume		Shift + Play /





Original	Substitut	Original	Substitut
	Standby		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down





