 

 






 

 
 



 



 



 


 




 










Original	Substitut	Original	Substitut
	Standby		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Vol+		Vol+
	Vol-		Vol-
	Left		Left
	Right		Right
	I<<		I<< / Preset-
	>>I		>>I / Preset+

Original	Substitut	Original	Substitut
	Stop		Stop / Hold
	Play/Pause		Play / Slow
	Play/Pause		Pause / Step / Freeze
	I>/Resume		Shift + Play /
	Surround		Eject / Surround
	Sound		Sound / Title
	Night		Shift + Sleep / Timer
	Mute		Mute / Dimmer
	Repeat		Green / APP / Repeat
	Repeat A-B		Yellow / YouTube / Repeat
	Sleep		Sleep / Timer
	DIM		Shift + Mute / Dimmer
	Subw +		Up
	Rear +		Shift + CH+ /
	Center +		CH+ / Page+
	Tv Vol+		Shift + Vol+
	Subw -		Down





Original	Substitut		
REAR	Rear -		Shift + CH- /
CENTER	Center -		CH- / Page-
TV VOL	Tv Vol-		Shift + Vol-

Original	Substitut







 

 







 

 

 

 

 







 



Original	Substitut		
	Standby		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Disc (DVD)		D.Menu / Top
	0		0
	Vol+		Vol+
	System (DVD)		Menu / Home
	Vol-		Vol-
	I<<		I<< / Preset-
	>>I		>>I / Preset+

Original	Substitut		
	Stop		Stop / Hold
	Play/Pause		Play / Slow
	I>/Resume		Shift + Play /

 



 





 

 

 

 

 

 





Original	Substitut	Original	Substitut
	Standby		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down





Original	Substitut	Original	Substitut
	Standby		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

