






 

 



 

 



 
 


 

 















 







 

 

 

 




 




 

 




Original	Substitut	Original	Substitut
	Power		Power
	Source		AV
	HDMI		D. Menu
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text
	PRE-CH		Pre Ch
	Vol+		Vol +
	Vol-		Vol -

Original	Substitut	Original	Substitut
	Mute		Mute
	P+		Ch +
	P-		Ch -
	CH List		List
	Menu		Menu
	Guide		Guide
	Smart Hub		Smart
	Tools		Options
	Info		Info
	Back/Return		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red





Original	Substitut	Original	Substitut
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Family Story	 Media		
 Search	 TV/R		
 P.Size	 Format		
 Support	 Eject		
 D	 3D		
 AD/Subt.	 Subt		
 <<<	 <<<		
 I<<<	 I<<<		
 Pause	 Pause		
 >>>	 >>>		
 >>>I	 >>>I		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		

