

 



 




Original	Substitut
 Power	 Power
 Mute	 Mute / Dimmer
 DTV	 Shift + 1
 Radio	 TV/Radio /
 USB	 Shift + 8
 DVD	 Shift + 2
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV Guide	 Guide / EPG / -/--
 0	 0

Original	Substitut
 Recall	 Back / Return
 Vol +	 Vol+
 P.Mode	 Picture / Format
 CH +	 CH+ / Page+
 Vol -	 Vol-
 S.Mode	 Sound / Title
 CH -	 CH- / Page-
 FAV	 Fav / Marker / PC
 Menu	 Menu / Home
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right
 Source	 AV / Input / RDS
 Down	 Down
 Info	 Info / Angle





Original	Substitut	Original	Substitut
Aspect	Shift + Picture / Format	<<	<< / Tune-
Sleep	Sleep / Timer	>>	>> / Tune+
Audio	Audio / Lang I/II	Play / Pause	Play / Slow
Subtitle	Subtitle / EQ	Play / Pause	Pause / Step / Freeze
Text	Text / Goto	Red / Goto	Red / Netflix / Search
Text Hold	Shift + Stop /	Green / A-B	Green / APP / Repeat
Text/DVD Zoom	Zoom / Size	Yellow / Angle /	Yellow / YouTube / Repeat
Display Power	Display / Media	Blue / Repeat	Blue / Prime Video / Random
Display Power	Shift + Power		
Rec / DVD Menu	D.Menu / Top		
Rec / DVD Menu	Rec / Rec Mode		
I<<	I<< / Preset-		
>>I	>>I / Preset+		
Stop / Open/Close	Eject / Surround		
Stop / Open/Close	Stop / Hold		
Rec List / DVD Setup	Smart / List		
Rec List / DVD Setup	Setup / OPT /		

Original	Substitut	Original	Substitut
<<	<< / Tune-		
>>	>> / Tune+		
Play / Pause	Play / Slow		
Play / Pause	Pause / Step / Freeze		
Red / Goto	Red / Netflix / Search		
Green / A-B	Green / APP / Repeat		
Yellow / Angle /	Yellow / YouTube / Repeat		
Blue / Repeat	Blue / Prime Video / Random		

