

 



 




 


 

 
 


 





 
 



 
 
 
 
 
 






 


 
 
 





| Original | Substitut | Original | Substitut |
|---|--|---|---|
|  Power |  Power |  USB |  AV |
|  Mute |  Mute |  Menu |  Menu |
|  1 |  1 |  EPG |  Guide |
|  2 |  2 |  Exit |  Exit |
|  3 |  3 |  Goto |  Smart |
|  4 |  4 |  Play |  Play |
|  5 |  5 |  Pause |  Pause |
|  6 |  6 |  << |  << |
|  7 |  7 |  >> |  >> |
|  8 |  8 |  Rec |  Rec |
|  9 |  9 |  Stop |  Stop |
|  0 |  0 |  UP |  Up |
|  Info |  Info |  Down |  Down |
|  FAV |  Pre Ch |  Right |  Right |
|  Page+ |  >> |  Left |  Left |
|  Page- |  << |  OK |  Ok |
|  Audio |  Dual |  CH+ |  Ch + |

| Original | Substitut | Original | Substitut |
|--|--|---|---|
|  MUTE |  MUTE |  AV |  AV |
|  DVD |  DVD |  Menu |  Menu |
|  REC MODE |  REC MODE |  Guide |  Guide |
|  DISC NAV |  DISC NAV |  Exit |  Exit |
|  SOUND |  SOUND |  Smart |  Smart |
|  AD |  AD |  Play |  Play |
|  SETTINGS |  SETTINGS |  << |  << |
|  OPT |  OPT |  >> |  >> |
|  ECO |  ECO |  Rec |  Rec |
|  3D |  3D |  Stop |  Stop |
|  TV/R |  TV/R |  Up |  Up |
|  TIMER |  TIMER |  Down |  Down |
|  AV |  AV |  Right |  Right |
|  REPEAT |  REPEAT |  Left |  Left |
|  ZOOM |  ZOOM |  Ok |  Ok |
|  AV |  AV |  Ch + |  Ch + |



