

 



 

 



 

 

 

 

 

 

 





 

 

 

 

 

 



 





 























 





| Original | Substitut | Original | Substitut |
|--|--|---|---|
|  Power |  Power |  CHN List |  Smart / List |
|  Mute |  Mute / Dimmer |  0 |  0 |
|  Picture |  Picture / Format |  Return / Back |  Back / Return |
|  Sound |  Sound / Title |  Menu |  Menu / Home |
|  Zoom |  Zoom / Size |  Up |  Up |
|  Subtitle |  Subtitle / EQ |  Source |  AV / Input / RDS |
|  EPG |  Guide / EPG / -/-- |  Left |  Left |
|  FAV |  Fav / Marker / PC |  Enter |  OK |
|  1 |  1 |  Right |  Right |
|  2 |  2 |  Down |  Down |
|  3 |  3 |  Exit |  Exit / Cancel / Clear |
|  4 |  4 |  TV / Radio |  TV/Radio / |
|  5 |  5 |  Vol + |  Vol+ |
|  6 |  6 |  Home |  D.Menu / Top |
|  7 |  7 |  PR + |  CH+ / Page+ |
|  8 |  8 |  Vol - |  Vol- |
|  9 |  9 |  PR - |  CH- / Page- |





| Original | Substitut |
|--|---|
|  Rec |  Rec / Rec Mode |
|  Sleep |  Sleep / Timer |
|  Info |  Info / Angle |
|  Play/Pause / Index |  Play / Slow |
|  Play/Pause / Index |  Pause / Step / Freeze |
|  << / Reveal |  << / Tune- |
|  >> / Mix |  >> / Tune+ |
|  Stop / Cancel |  Stop / Hold |
|  I<< / Size |  I<< / Preset- |
|  >>I / Sub-Page |  >>I / Preset+ |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |
|  I/II / Nicam |  Audio / Lang I/II |
|  Text |  Text / Goto |
|  Freeze / Hold |  Shift + Stop / Hold |

Hold

| Original | Substitut |
|--|--|
|  PVR List |  Display / Media |
|  Quick |  Setup / OPT / |
|  AD |  Eject / Surround |
|  3D |  Shift + 3 |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

