 


 

 












 







 

 

















 







 



 



 



 




Original	Substitut	Original	Substitut
 Power	 Power	 0	 0
 Setup	 D. Menu	 Movie	 Shift + 1
 DTV	 Smart	 Music	 Shift + 2
 HDMI / AV	 AV	 Photo	 Shift + 3
 Mute	 Mute	 Vol -	 Vol -
 Edit	 Ch +	 Vol +	 Vol +
 Copy	 Ch -	 Up	 Up
 Info	 Info	 Right	 Right
 1	 1	 Down	 Down
 2	 2	 Left	 Left
 3	 3	 Enter	 Ok
 4	 4	 Exit	 Exit
 5	 5	 Home	 Shift + Smart
 6	 6	 Home	 Menu
 7	 7	 Timer REC	 Back
 8	 8	 EPG	 Guide
 9	 9	 Rec	 Rec





Original	Substitut	Original	Substitut
	<< REV		<<
	>> F.F		>>
	Play / Pause		Play
	Play / Pause		Pause
	Stop		Stop
	I<< PG.UP		I<<
	I<< PG.UP	 + 	Shift + Up
	>>I PG.DN		>>I
	>>I PG.DN	 + 	Shift + Down
	Audio		Dual
	Sub-T		Subt
	S/S		Format
	TV / Radio		TV/R
	Disk		Media
	Repeat	 + 	Shift + Text
	TTX / DVD	 + 	Shift + Media
	TTX / DVD		Text

Original	Substitut	Original	Substitut
	FAV		Pre Ch
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

