



Original	Substitut
	Disc Skip
	Blue / Prime Video / Random
	Sleep
	Sleep / Timer
	Power
	Power
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	Stop / Hold
	Yellow / YouTube / Repeat
	Yellow / YouTube / Repeat
	I<< / Preset-
	I>> / Preset+
	I>> / Preset+
	Red / Netflix / Search
	Red / Netflix / Search
	<< / Tune-
	>> / Tune+
	Deck A Play
	Green / APP / Repeat
	Green / APP / Repeat
	Display / Media
	Display / Media
	Exit / Cancel / Clear
	Exit / Cancel / Clear
	Shift + Play /
	Shift + Play /
	Shift + Pause / Step / Freeze

Original	Substitut
	Shift + Stop /
	Shift + Stop /
	Smart / List
	Smart / List
	Info / Angle
	Info / Angle
	Menu / Home
	Menu / Home
	Up
	Up
	Vol+
	Vol+
	OK
	OK
	Down
	Down
	Vol-

