





 


 



















 

 



 






 
 





 


 



 









Original		Substitut		Original		Substitut	
	DVD Power		Power		Manual Skip		Shift + Right
	Drive Select		D. Menu		I<< Skip		I<<
	1		1		Skip >>I		>>I
	2		2		<< / Slow/Search		<<
	3		3		>> / Slow/Search		>>
	4		4		Stop		Stop
	5		5		Pause		Pause
	6		6		Play		Play
	7		7		Status / i		Info
	8		8		Exit		Exit
	9		9		Direct Navigator		Media
	0		0		Function Menu		Menu
	Delete *		Shift + Exit		Guide		Guide
	Input Select		AV		Up		Up
	CH+		Ch +		Down		Down
	CH-		Ch -		Right/II>		Right
	Prog/Check		Smart		Left/<II		Left





Original		Substitut		Original		Substitut	
	OK		Ok		TV CH +		Shift + Ch +
	Option		Options		TV CH -		Shift + Ch -
	Return		Back		TV Vol +		Vol +
	Red		Red		TV Vol -		Vol -
	Green		Green				
	Yellow/Create Chapter		Yellow				
	Blue		Blue				
	Rec		Rec				
	Rec Mode		Shift + Rec				
	Audio		Dual				
	Direct Tv Rec		TV/R				
	Text		Text				
	STTL		Subt				
	Display		Shift + Info				
	Time Slip		Sleep				
	TV Power		Shift + Power				
	TV AV		Shift + AV				

