
 
 
 
 










 
 




 




Original		Substitut		Original		Substitut	
	On/Off		Power		Sound		Dual
	Mute		Mute		Source		AV
	1		1		CH+		Ch +
	2		2		CH-		Ch -
	3		3		Menu		Menu
	4		4		Exit		Exit
	5		5		Back		Back
	6		6		FAV		Shift + Pre Ch
	7		7		Up		Up
	8		8		Down		Down
	9		9		Right		Right
	0		0		Left		Left
	Tv Guide		Guide		OK		Ok
	Recall		Pre Ch		Info		Info
	Vol+		Vol +		Text		Text
	Vol-		Vol -		Subtitle		Subt
	Picture		Format		TV		TV/R





Original		Substitut		Original	Substitut
	You Tube		Media		
	Netflix		Shift + Media		
	Smart		Smart		
	Rec/DVD Menu		Rec		
	I<<		I<<		
	>>I		>>I		
	Stop		Stop		
	Rec List/DVD		List		
	<<		<<		
	>>		>>		
	Play		Play		
	Pause		Pause		
	Red/Goto		Red		
	Green/A-B		Green		
	Yellow/Angle		Yellow		
	Blue/Repeat		Blue		

