 

 

 
 
 
 
 
 
 
 
 
 
 
 

 




















Original	Substitut
	Power
	TV/Rad
	Mute
	TV/SAT
	Edit
	Sleep
	Mosaic
	Freeze
	Zoom
	EPG
	Subtitle
	FAV
	Audio
	A-Z
	USB
	Text
	Info

Substitut	Original
Power	
TV/Radio /	
Mute / Dimmer	
AV / Input / RDS	
Sound / Title	
Sleep / Timer	
D.Menu / Top	
Shift + Pause / Step /	
Zoom / Size	
Guide / EPG / -/--	
Subtitle / EQ	
Fav / Marker / PC	
Audio / Lang / I/II	
Eject / Surround	
Shift + 8	
Text / Goto	
Info / Angle	

Original	Substitut
	Menu
	Exit
	Vol+
	Up / CH+
	Up / CH+
	SAT
	SAT
	Vol-
	Left / V-
	OK
	Right / V+
	Recall
	Down / CH-
	Down / CH-
	File List
	Play
	Stop

Substitut	Original
Menu / Home	
Exit / Cancel / Clear	
Vol+	
Up	
CH+ / Page+	
Shift + 0	
Display / Media	
Vol-	
Left	
OK	
Right	
Back / Return	
CH- / Page-	
Down	
Smart / List	
Play / Slow	
Stop / Hold	