






 

 

 



 
 


 



 













 



 

 



 


 
 



 
















Original	Substitut	Original	Substitut
 Standby	 Power	 Tv/Radio	 TV/R
 Source	 AV	 Display	 Info
 1	 1	 Menu	 Menu
 2	 2	 Exit	 Exit
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 OK	 Ok
 8	 8	 Vol+	 Vol +
 9	 9	 Vol-	 Vol -
 0/10	 0	 Mute	 Mute
 FAV/Program	 Pre Ch	 EPG	 Guide
 Recall/10+	 Back	 Media	 Media
 P.Mode	 Format	 CH+	 Ch +
 S.Mode	 Shift + Dual	 CH-	 Ch -
 Sleep	 Sleep	 Rec	 Rec





Original	Substitut	Original	Substitut
T.SHIFT	T.Shift	HOME SMART	Smart
AUDIO I/II	I/II/Audio	SOUND DUAL	Dual
ASPECT SIZE	Size/Aspect	ECO 3D	3D
D.SETUP	D.Setup	SETTINGS OPT	Options
D.MENU	D.Menu	E-MANUAL D.MENU	D. Menu
TITLE	Title	REPEAT TEXT	Text
EJECT	Eject	ZOOM	Eject
HOLD	Play	PLAY MODE	Play
HOLD	Pause/Hold		Pause
REVEAL	Stop/Reveal	■	Stop
TEXT	<</Text	<<	<<
SUBPAGE	>>/Subpage	>>	>>
INDEX	I<</Index	<<	I<<
MIX	>>I/Mix	>>I	>>I
ZOOM	Zoom	SHIFT + ZOOM	Shift + Eject
SUBTITLE	Subtitle	AD SUBT	Subt
GOTO	Red/Goto	A	Red

Original	Substitut	Original	Substitut
A-B	Green/A-B	B	Green
ANGLE	Yellow/Angle	C	Yellow
REPEAT	Blue/Repeat	D	Blue

