



 



 



 

 



 

 



 



 




















































 
 




 




 
 









 



Original		Substitut		Original		Substitut	
	Power		Power		Down		Down
	Mute		Mute / Dimmer		Exit		Exit / Cancel / Clear
	Picture		Picture / Format		1		1
	Sound		Sound / Title		2		2
	Aspect		Shift + Picture / Format		3		3
	Sleep		Sleep / Timer		4		4
	Subtitle		Subtitle / EQ		5		5
	CH. List		Smart / List		6		6
	EPG		Guide / EPG / -/--		7		7
	FAV		Fav / Marker / PC		8		8
	TV / Radio		TV/Radio /		9		9
	Up		Up		0		0
	Input		AV / Input / RDS		Recall		Back / Return
	Left		Left		Info		Info / Angle
	OK		OK		Vol +		Vol+
	Right		Right		Rec		Rec / Rec Mode
	Menu		Menu / Home		Rec. List		Display / Media





Original	Substitut
	 CH+ / Page+
	 Vol-
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 CH- / Page-
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Text / Goto
	 Shift + Exit / Cancel / Clear
	 Eject / Surround
	 Audio / Lang I/II
	 << / Tune-
	 >> / Tune+
	  << / Preset-

Original	Substitut
	 >>  / Subpage Preset+

