 



 

 

 

 

 





 



 



 

 





 
 
 

 

 

 















 

 

 









Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	Info		Info / Angle
	DMP		D.Menu / Top
	Up		Up
	EPG		Guide / EPG / -/--
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol +		Vol+
	List		Smart / List
	CH +		CH+ / Page+
	Vol -		Vol-
	CH -		CH- / Page-
	Fav		Fav / Marker / PC
	Sleep		Sleep / Timer
	Index		Display / Media
	Recall		Back / Return
	Red / <<		Red / Netflix / Search
	Red / <<		<< / Tune-





Original	Substitut	Original	Substitut
Green / >>	>> / Tune+		
Green / >>	Green / APP / Repeat		
Yellow / I<<	I<< / Preset-		
Yellow / I<<	Yellow / YouTube / Repeat		
Blue / >>	Blue / Prime Video / Random		
Blue / >>	>>  / Preset+		
Text / Play/Pause	Text / Goto		
Text / Play/Pause	Pause / Step / Freeze		
Text / Play/Pause	Play / Slow		
Stop / Still	Stop / Hold		
Timer / Subtitle	Subtitle / EQ		
Size / Aspect	Zoom / Size		
Cancel [≡X]	+  Shift + Exit / Cancel / Clear		
Radio	TV/Radio /		
Audio / I/II	Audio / Lang I/II		
Rec	Rec / Rec Mode		





Original		Substitut		Original		Substitut	
	Power		Power		Left		Left
	Mute		Mute / Dimmer		Enter		OK
	1		1		Right		Right
	2		2		Menu		Menu / Home
	3		3		Down		Down
	4		4		Exit		Exit / Cancel / Clear
	5		5		Vol+		Vol+
	6		6		List		Smart / List
	7		7		CH+		CH+ / Page+
	8		8		Vol-		Vol-
	9		9		CH-		CH- / Page-
	[≡?]/Source		AV / Input / RDS		♥		Fav / Marker / PC
	0		0		Sleep		Sleep / Timer
	[≡i]/Info		Info / Angle		Index		Display / Media
	DMP		D.Menu / Top		Back		Back / Return
	Up		Up		Red		Red / Netflix / Search
	EPG		Guide / EPG / -/--		<<		<< / Tune-





Original	Substitut	Original	Substitut
	Green		Green / APP / Repeat
	>>		>> / Tune+
	Yellow		Yellow / YouTube / Repeat
	I<<		I<< / Preset-
	Blue		Blue / Prime Video / Random
	>>I		>>I / Preset+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	[≡]		Text / Goto
	Stop/Still		Stop / Hold
	[≡+]		Picture / Format
	[≡o]/Subtitle		Subtitle / EQ
	[≡◆]/[+]		Zoom / Size
	[≡x]		Setup / OPT /
	Radio		TV/Radio /
	Audio		Audio / Lang I/II
	Rec		Rec / Rec Mode

