

 

 

 

 

 




 



 

 

 






















 

 


 



 

 

 

 









Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer

Original	Substitut	Original	Substitut
	Vol +		Vol+
	MTS		Info / Angle
	CH +		CH+ / Page+
	Vol -		Vol-
	Aspect		Shift + Picture / Format
	CH -		CH- / Page-
	Guide		Guide / EPG / -/-
	Home		Shift + Menu /
	Rec		Rec / Rec Mode
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down





Original	Substitut
Display	Display / Media
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
<< / Index	<< / Tune-
Play/Pause /	Pause / Step / Freeze
Play/Pause /	Shift + Exit / Cancel / Clear
Play/Pause /	Play / Slow
>> / TTX	>> / Tune+
>> / TTX	Text / Goto
I<< / SUB.PG	I<< / Preset-
>>I / Reveal	>>I / Preset+
Stop / Mix	Stop / Hold
CAP	D.Menu / Top
Subtitle	Subtitle / EQ
TV / Radio	TV/Radio /

Original	Substitut
FAV	Fav / Marker / PC
Size / Mouse	Zoom / Size
Hold / Refresh	Shift + Stop /



Program