




 



















 












Original	Substitut
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 List	 List
 Recall	 Back
 Vol+	 Vol +
 Vol-	 Vol -
 Aspect	 3D

Original	Substitut
 Home	 Smart
 CH+	 Ch +
 CH-	 Ch -
 Menu	 Menu
 Source	 AV
 Exit	 Exit
 Display	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 P.Mode	 Shift + Format
 S.Mode	 Dual
 Sleep	 Sleep
 MTS	 Options
 Rec	 Rec





Original	Substitut	Original	Substitut
Guide	Guide	Size/Mouse	Format
Red	Red	Hold/Refresh	D. Menu
Green	Green		
Yellow	Yellow		
Blue	Blue		
<</Index	<<		
Play	Play		
Pause/Cancel	Pause		
>>	>>		
I<</Sub.PG	I<<		
>>I/Reveal	>>I		
Stop/Mix	Stop		
TTX	Text		
CAP	Media		
Subtitle	Subt		
Tv/Radio	TV/R		
FAV	Pre Ch		

