



Original	Substitut	Original	Substitut
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Cancel	+	Shift + Exit / Cancel / Clear
	Audio		Audio / Lang I/II
	Open/Close		Eject / Surround
	PIP		Picture / Format
	Internet		Smart / List
	Audio		Sound / Title

Original	Substitut	Original	Substitut
	<< Search		<< / Tune-
	Play		Play / Slow
	Search >>		>> / Tune+
	I<< Skip		I<< / Preset-
	Pause		Pause / Step / Freeze
	Skip >>I		>>I / Preset+
	Stop		Stop / Hold
	Exit		Exit / Cancel / Clear
	Status		Info / Angle
	Option		Setup / OPT /
	Return		Back / Return
	Top Menu		D.Menu / Top
	Home		Menu / Home
	Pop-Up Menu		Display / Media
	Up		Up
	Down		Down
	Right		Right



Secondary

