



 




 







































Original	Substitut
 TV	 TV/Radio /
 TV	 +  Shift + 1
 Audio	 Audio / Lang I/II
 TV / VCR	 AV / Input / RDS
 Power	 Power
 1	 1
 2	 2
 3	 3
 Text	 Text / Goto
 4	 4
 5	 5
 6	 6
 Subtitle	 Subtitle / EQ
 7	 7
 8	 8
 9	 9
 Sound	 Sound / Title

Original	Substitut
 Alt	 Fav / Marker / PC
 0	 0
 i	 Info / Angle
 Setup	 Setup / OPT /
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Navigator	 Smart / List
 Left	 Left
 OK	 OK
 Right	 Right
 Vol +	 Vol+
 Down	 Down
 CH +	 CH+ / Page+
 Vol -	 Vol-
 Mute	 Mute / Dimmer
 Recall	 Back / Return
 CH -	 CH- / Page-





	Original	Substitut		Original	Substitut
	 Red	 Red / Netflix / Search			
	 Green	 Green / APP / Repeat			
	 Yellow	 Yellow / YouTube / Repeat			
	 Blue	 Blue / Prime Video / Random			
	 EPG	 Guide / EPG / --			
	 Check	 Display / Media			

