



| Original | Substitut |
|--|--|
|  POWER |  Power |
|  TV |  Shift + 1 |
|  VCR / AUX |  Shift + 7 |
|  VCR / AUX |  Shift + 4 |
|  SLEEP |  Sleep / Timer |
|  TV / AV |  AV / Input / RDS |
|  TUNER / BAND |  Shift + 6 |
|  DVD / CD |  Shift + 3 |
|  DVD / CD |  Shift + 2 |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  CH + |  CH+ / Page+ |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  CH - |  CH- / Page- |

| Original | Substitut |
|--|---|
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  VOL + |  Vol+ |
|  Cancel |  Exit / Cancel / Clear |
|  0 |  0 |
|  ≥ 10 / -/- |  Guide / EPG / -/- |
|  VOL - |  Vol- |
|  SKIP PREV. |  I<< / Preset- |
|  SKIP NEXT |  >>I / Preset+ |
|  SLOW/SEARCH |  << / Tune- |
|  SLOW/SEARCH |  >> / Tune+ |
|  STOP |  Stop / Hold |
|  PAUSE |  Pause / Step / Freeze |
|  PLAY |  Play / Slow |
|  TOP MENU / DIR. NAV. |  D.Menu / Top |
|  UP |  Up |





| Original | Substitut | Original | Substitut |
|---|--|--|---|
|  MENU / PLAY LIST |  Menu / Home |  AUDIO |  Audio / Lang I/II |
|  LEFT |  Left |  ZOOM |  Zoom / Size |
|  ENTER |  OK |  SETUP |  Setup / OPT / |
|  RIGHT |  Right |  MUTING |  Mute / Dimmer |
|  DISPLAY / TV VOL- |  Display / Media |  FL DISPLAY |  Shift + Display / Media |
|  DISPLAY / TV VOL- |  Shift + Vol- |  PAGE |  Shift + CH+ / |
|  DOWN |  Down |  GROUP |  Shift + CH- / |
|  RETURN / TV |  Back / Return |  REPEAT |  Green / APP / Repeat |
|  RETURN / TV |  Shift + Vol+ |  PLAY MODE |  Info / Angle |
|  SUBWOOFER |  Shift + Subtitle / EQ |  TEST |  Text / Goto |
|  SFC |  Blue / Prime Video / Random |  CH. SELECT |  Smart / List |
|  C. FOCUS |  TV/Radio / |  QUICK REPLAY |  Shift + OK |
|  SUPER SRND. |  Eject / Surround |  SUBTITLE |  Subtitle / EQ |
|  DOLBY PL. II |  Sound / Title | | |
|  Mix 2CH |  Picture / Format | | |
|  C. S. M. |  Red / Netflix / Search | | |
|  POSITION |  Yellow / YouTube / Repeat | | |



| Original | Substitut | Original | Substitut |
|---|---|--|--|
|  AUDIO |  Audio / Lang I/II |  ZOOM |  Zoom / Size |
|  SETUP |  Setup / OPT / |  MUTING |  Mute / Dimmer |
|  FL DISPLAY |  Shift + Display / Media |  PAGE |  Shift + CH+ / |
|  GROUP |  Shift + CH- / |  REPEAT |  Green / APP / Repeat |
|  PLAY MODE |  Info / Angle |  TEST |  Text / Goto |
|  CH. SELECT |  Smart / List |  QUICK REPLAY |  Shift + OK |
|  SUBTITLE |  Subtitle / EQ | | |



MEMORY
















 










| Original | Substitut |
|---|---|
|  Power |  Power |
|  Power AV |  Shift + Power |
|  Tv/AV |  AV / Input / RDS |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  CH+ |  CH+ / Page+ |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  CH- |  CH- / Page- |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  ≥ 10 / -/- |  Guide / EPG / -/- |
|  Tv Vol- |  Vol- |

| Original | Substitut |
|---|--|
|  Tv Vol+ |  Vol+ |





| Original | Substitut | | |
|---|------------|---|--------------------|
|  | Power |  | Shift + Power |
|  | Power AV |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | ≥10 / -/-- |  | Guide / EPG / -/-- |
|  | I<< |  | I<< / Preset- |
|  | I>> |  | I>> / Preset+ |
|  | <<< |  | <<< / Tune- |
|  | >>> |  | >>> / Tune+ |

| Original | Substitut | | |
|---|-----------|---|-----------------------|
|  | Stop |  | Stop / Hold |
|  | Pause |  | Pause / Step / Freeze |
|  | Play |  | Play / Slow |

