



 


 


 

 

 


 




 
 














Original	Substitut
 Power	 Power
 Picture	 Picture / Format
 Input Tv	 Shift + AV / Input / RDS
 Input AV	 AV / Input / RDS
 Menu	 Menu / Home
 Text	 Text / Goto
 STTL	 Subtitle / EQ
 APPS	 Fav / Marker / PC
 i	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Home	 Shift + Menu /
 Netflix	 Shift + Red / Netflix /
 Left	 Left
 Up	 Up
 Right	 Right
 Guide	 Guide / EPG / -/--
 OK	 OK

Original	Substitut
 Option	 Setup / OPT /
 Down	 Down
 Back/Return	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 Vol-	 Vol-
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





Original

Substitut

6 ^{mno}	6	TUNER 6	6
7 ^{pqrs}	7	AUX - HDD 7	7
8 ^{tuv}	8	USB 8	8
9 ^{wxyz}	9	BLUETOOTH 9	9
? eHELP	?/Help	SHIFT + ANGLE INFO	Shift + Info / Angle
0	0	HDMI - BAT 0	0
LAST VIEW	Last View	SHIFT + RETURN BACK	Shift + Back / Return
	<<	TUNE- TUNE-	<< / Tune-
	Play	SLOW TUNE+	Play / Slow
	>>	TUNE-+ TUNE+	>> / Tune+
	I<<	PRESET- PRESET-	I<< / Preset-
	Pause	STEP - FREEZE STEP - FREEZE	Pause / Step / Freeze
	>>I	PRESET+ PRESET+	>>I / Preset+
MY APP 	My APP	LIST SMART	Smart / List
	Stop	HOLD HOLD	Stop / Hold
	Rec	REC MODE REC MODE	Rec / Rec Mode

Original

Substitut

