






 
 
 
 







Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	V.Format		Shift + Picture / Format
	Sleep		Sleep / Timer
	Text		Text / Goto
	TV / Radio		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[[≡]]		Smart / List
	0		0

Original	Substitut	Original	Substitut
	Recall		Back / Return
	Vol -		Vol-
	Vol +		Vol+
	CH -		CH- / Page-
	CH +		CH+ / Page+
	Menu		Menu / Home
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	OK		OK
	Right		Right
	Page Down		Shift + CH- /
	Down		Down
	Page Up		Shift + CH+ /
	FAV		Fav / Marker / PC
	Guide		Guide / EPG / -/-
	Info		Info / Angle





Original	Substitut
	✓
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Yellow / Audio / Lang I/II
	Blue / Prime Video / Random
	Blue / Subtitle / EQ
	Play / Slow
	Stop / Hold
	Pause / Step / Freeze
	Rec / Rec Mode
	>[≡]
	I>
	<<
	>>
	Zoom / Size
	> <

Hold

Original	Substitut
	I<< / Preset-
	>> / Preset+
	SHIFT + HDMI - BAT 0 Shift + 0
	FORMAT PICTURE Picture / Format
	OPT-TOOLS SETUP Setup / OPT /
	SHIFT + OPT-TOOLS SETUP Shift + Setup / OPT / Tools

