










 



 



 

 





 







 



 



 



 

 





 



 






 
 




Original	Substitut	Original	Substitut
 Power MD	 Power	 Right	 Right
 TV	 TV/R	 Left	 Left
 CD	 Yellow	 Enter	 Ok
 DVD	 Blue	 Menu	 D. Menu
 Tuner/Band	 Green	 Display	 Info
 Tape	 Red	 Top Menu/Disc/Deck	 Menu
 VCR	 Smart	 1 MD	 1
 MD	 Media	 2 MD	 2
 Vol+	 Vol +	 3 MD	 3
 Vol-	 Vol -	 4 MD	 4
 Muting	 Mute	 5 MD	 5
 Stop MD	 Stop	 6 MD	 6
 Play MD	 Play	 7 MD	 7
 <</>> MD	 <<	 8 MD	 8
 >>/>> MD	 >>	 9 MD	 9
 Up	 Up	 0 MD	 0
 Down	 Down	 >10/-/- MD	 Guide












 

 

 



 
 
 

 













 

 





 



 

 

 







Original		Substitut	
	Tv/AV		AV
	Stereo		Dual
	Surround		Options
	SFC		Subt
	Test		Back
	Delay		Format
	Level		3D
	+		Ch +
	-		Ch -
	Power TV		Shift + Power
	Tv Vol Up		Shift + Vol +
	Tv Vol Down		Shift + Vol -
	1 Tv		Shift + 1
	2 Tv		Shift + 2
	3 Tv		Shift + 3
	4 Tv		Shift + 4
	5 Tv		Shift + 5

Original		Substitut	
	6 Tv		Shift + 6
	7 Tv		Shift + 7
	8 Tv		Shift + 8
	9 Tv		Shift + 9
	0 Tv		Shift + 0
	>10/-/- Tv		Shift + Guide





Original	Substitut	Original	Substitut
 Power DVD	 Power	 Right	 Right
 TV	 TV/R	 Left	 Left
 VCR	 Smart	 Enter	 Ok
 Tuner/Band	 Green	 Stereo	 Dual
 Tape	 Red	 Surround	 Options
 MD	 Media	 SFC	 Subt
 CD	 Yellow	 Test	 Back
 DVD	 Blue	 Delay	 Format
 Play DVD	 Play	 Level	 3D
 I<</<< DVD	 <<	 +	 Ch +
 Stop DVD	 Stop	 -	 Ch -
 >>/>>I DVD	 >>	 1 DVD	 1
 Top Menu/Disc/Deck	 Menu	 2 DVD	 2
 Display	 Info	 3 DVD	 3
 Menu	 D. Menu	 4 DVD	 4
 Up	 Up	 5 DVD	 5
 Down	 Down	 6 DVD	 6





	Original	Substitut		Original	Substitut
	7 DVD		7		
	8 DVD		8		
	9 DVD		9		
	0 DVD		0		
	>10/-/- DVD		Guide		
	Vol+		Vol +		
	Vol-		Vol -		
	Muting		Mute		





Original	Substitut	Original	Substitut
	Power CD		Power
	TV		TV/R
	VCR		Smart
	CD		Yellow
	DVD		Blue
	Tape		Red
	MD		Media
	Tuner/Band		Green
	Stop CD		Stop
	I<</<< CD		<<
	>>/>>I CD		>>
	Play CD		Play
	Menu		D. Menu
	Display		Info
	Top Menu/Disc/Deck		Menu
	Up		Up
	Down		Down

Original	Substitut	Original	Substitut
	Right		Right
	Left		Left
	Enter		Ok
	Stereo		Dual
	Surround		Options
	SFC		Subt
	Test		Back
	Delay		Format
	Level		3D
	+		Ch +
	-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	Power Tape		Shift + Power
	Stop Tape		Shift + Stop
	Play Tape		Shift + Play






 





 





 









 













 





















 








Original	Substitut	Original	Substitut
 I<</<< Tape	 +  Shift + <<		
 >>/>>I Tape	 +  Shift + >>		
 Top Menu/Disc/Deck	 +  Shift + Menu		
 1 CD-Tape	 1		
 2 CD-Tape	 2		
 3 CD-Tape	 3		
 4 CD-Tape	 4		
 5 CD-Tape	 5		
 6 CD-Tape	 6		
 7 CD-Tape	 7		
 8 CD-Tape	 8		
 9 CD-Tape	 9		
 0 CD-Tape	 0		
 >10/!- CD-Tape	 GUIDE		Guide
 Direct Tuning/Disc Enter	 REPEAT TEXT		Text

Original	Substitut	Original	Substitut








 

 

 

 

 

 


Original	Substitut	Original	Substitut
 Power VCR	 Power	 6 VCR	 6
 VCR	 Smart	 7 VCR	 7
 Tape	 Red	 8 VCR	 8
 TV	 TV/R	 9 VCR	 9
 CD	 Yellow	 0 VCR	 0
 DVD	 Blue	 >10/-/- VCR	 Guide
 Tuner/Band	 Green	 Direct Tuning/Disc Enter	 Text
 MD	 Media	 Vol+	 Vol +
 Stop	 Stop	 Vol-	 Vol -
 I<</>>I	 <<	 Muting	 Mute
 >>/>>I	 >>	 Up	 Up
 Play	 Play	 Down	 Down
 1 VCR	 1	 Right	 Right
 2 VCR	 2	 Left	 Left
 3 VCR	 3	 Enter	 Ok
 4 VCR	 4	 Top Menu/Disc/Deck	 Menu
 5 VCR	 5	 Display	 Info





Original	Substitut	Original	Substitut
 Menu	 D. Menu	 8 Tuner/Band	 Shift + 8
 Stereo	 Dual	 9 Tuner/Band	 Shift + 9
 Surround	 Options	 0 Tuner/Band	 Shift + 0
 SFC	 Subt	 >10/-/-	 Shift + Guide
 Test	 Back		
 Delay	 Format		
 Level	 3D		
 +	 Ch +		
 -	 Ch -		
 Power Tuner/Band	 Shift + Power		
 1 Tuner/Band	 Shift + 1		
 2 Tuner/Band	 Shift + 2		
 3 Tuner/Band	 Shift + 3		
 4 Tuner/Band	 Shift + 4		
 5 Tuner/Band	 Shift + 5		
 6 Tuner/Band	 Shift + 6		
 7 Tuner/Band	 Shift + 7		

Original	Substitut	Original	Substitut
 8 Tuner/Band	 Shift + 8	 8 Tuner/Band	 Shift + 8
 9 Tuner/Band	 Shift + 9	 9 Tuner/Band	 Shift + 9
 0 Tuner/Band	 Shift + 0	 0 Tuner/Band	 Shift + 0
 >10/-/-	 Shift + Guide	 >10/-/-	 Shift + Guide

