



Original	Substitut	Original	Substitut
Power DVD	Power	CH-	Ch -
Direct Tv Rec	TV/R	CH+	Ch +
DVD	Smart	CH	Ch
SD/PC	Media	ShowView	Blue
1	1	Manual Skip	Subt
2	2	I<< Skip	I<<
3	3	>>I Skip	>>I
4	4	<< Slow/Search	<<
5	5	Slow/Search >>	>>
6	6	Stop	Stop
7	7	Pause	Pause
8	8	Play	Play
9	9	Direct Navigator/Top	Menu
0	0	Function	Options
*/Cancel	Guide	Sub Menu	D. Menu
Input Select	AV	Return	Back
CH+	CH+	Up	Up
		Down	Down
		Right/II>	Right

Original	Substitut	Original	Substitut
Power DVD	Power	CH-	Ch -
Direct Tv Rec	TV/R	CH+	Ch +
DVD	Smart	CH	Ch
SD/PC	Media	ShowView	Blue
1	1	Manual Skip	Subt
2	2	I<< Skip	I<<
3	3	>>I Skip	>>I
4	4	<< Slow/Search	<<
5	5	Slow/Search >>	>>
6	6	Stop	Stop
7	7	Pause	Pause
8	8	Play	Play
9	9	Direct Navigator/Top	Menu
0	0	Function	Options
*/Cancel	Guide	Sub Menu	D. Menu
Input Select	AV	Return	Back
CH+	CH+	Up	Up
		Down	Down
		Right/II>	Right





Original	Substitut	Original	Substitut
<II/Left	Left	CH- Tv	Shift + Ch -
Enter	Ok	Volume+ Tv	Vol +
Prog/Check	Sleep	Volume- Tv	Vol -
Display	Info		
Status	3D		
Time Slip	Format		
Timer	Shift + AV		
Erase	Exit		
Rec Mode	Shift + Rec		
Rec	Rec		
A/Ext Link	Red		
B	Green		
C/Create Chapter	Yellow		
Audio	Dual		
Power Tv	Shift + Power		
AV Tv	Eject		
CH+ Tv	Shift + Ch +		

Original	Substitut

