



Original	Substitut
 On/Standby	 Power
 Display	 Display / Media
 DVD / BD	 Shift + 2
 VCR / DVR	 Shift + 4
 CBL/SAT	 Shift + 0
 Game	 Shift + 9
 AUX	 Shift + 7
 TV / TAPE	 Shift + 5
 TV / TAPE	 Shift + 1
 TUNER	 Shift + 6
 PORT	 Shift + 8
 CD	 Shift + 3
 Muting	 Mute / Dimmer
 CH/Disc/Album	 CH+ / Page+
 Vol+	 Vol+
 CH/Disc/Album-	 CH- / Page-
 Vol-	 Vol-

Original	Substitut
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Setup	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Audio	 Audio / Lang I/II
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Movie Tv	 Red / Netflix / Search
 Music	 Green / APP / Repeat



 






 

 

 



 







 






 


 


 

 







 

	Original	Substitut	
	Game	 Yellow / YouTube / Repeat	
	Stereo	 Blue / Prime Video / Random	
	1	 1	
	2	 2	
	3	 3	
	4	 4	
	5	 5	
	6	 6	
	7	 7	
	8	 8	
	9	 9	
	+10/--/---10/Dimmer/D.Tun	 Guide / EPG / --	
	0/11	 0	
	CLR/Sleep/12	 Fav / Marker / PC	
	CLR/Sleep/12	 Sleep / Timer	
	CLR/Sleep/12	 Exit / Cancel / Clear	

	Original	Substitut





Original	Substitut
 Power BD/DVD	 Power
 DVD/BD	 Smart / List
 CBL/SAT	 Display / Media
 Vol+ Receiver	 Vol+
 Vol- Receiver	 Vol-
 Top Menu	 D.Menu / Top
 Up BD/DVD	 Up
 Menu BD/DVD	 Menu / Home
 Left BD/DVD	 Left
 Enter BD/DVD	 OK
 Right BD/DVD	 Right
 Setup BD/DVD	 Setup / OPT /
 Down BD/DVD	 Down
 Return BD/DVD	 Back / Return
 Audio BD/DVD	 Audio / Lang I/II
 I<< BD/DVD	 I<< / Preset-
 >>I BD/DVD	 >>I / Preset+

Original	Substitut
 << BD/DVD	 << / Tune-
 Play BD/DVD	 Play / Slow
 >> BD/DVD	 >> / Tune+
 Pause BD/DVD	 Pause / Step / Freeze
 Stop BD/DVD	 Stop / Hold
 Search BD/DVD	 Red / Netflix / Search
 Repeat BD/DVD	 Green / APP / Repeat
 Random	 Blue / Prime Video / Random
 Play Mode	 Yellow / YouTube / Repeat
 1 BD/DVD	 1
 2 BD/DVD	 2
 3 BD/DVD	 3
 4 BD/DVD	 4
 5 BD/DVD	 5
 6 BD/DVD	 6
 7 BD/DVD	 7
 8 BD/DVD	 8





Original	Substitut
9 BD/DVD	9
+10/--/--10	Guide / EPG / --
0/11 BD/DVD	0
CLR/12 BD/DVD	Fav / Marker / PC
CLR/12 BD/DVD	Exit / Cancel / Clear
Power CBL/SAT	Shift + Power
CH Disc/Album+ CBL/SAT	Shift + CH+ /
CH Disc/Album- CBL/SAT	Shift + CH- /
Guide CBL/SAT	Shift + Guide / EPG / --
Up CBL/SAT	Shift + Up
Menu/Prev CH CBL/SAT	Shift + Menu /
Left CBL/SAT	Shift + Left
Enter CBL/SAT	Shift + OK
Right CBL/SAT	Shift + Right
Setup CBL/SAT	Shift + Setup / OPT / Tools
Down CBL/SAT	Shift + Down
Return CBL/SAT	Shift + Back / Return

Original	Substitut
<< CBL/SAT	Shift + << /
Play CBL/SAT	Shift + Play /
>> CBL/SAT	Shift + >> /
Pause CBL/SAT	Shift + Pause / Step /
Stop CBL/SAT	Shift + Stop /
Movie Tv/Search CBL/SAT	Shift + Red / Netflix /
Music/Repeat CBL/SAT	Shift + Green / APP /
Game/Random	Shift + Yellow / YouTube /
Stereo/Play Mode CBL/SAT	Shift + Blue / Prime
1 CBL/SAT	Shift + 1
2 CBL/SAT	Shift + 2
3 CBL/SAT	Shift + 3
4 CBL/SAT	Shift + 4
5 CBL/SAT	Shift + 5
6 CBL/SAT	Shift + 6
7 CBL/SAT	Shift + 7
8 CBL/SAT	Shift + 8



 














 

 


 

 
 
 

 
 


 
 

 

 

 


 







 

 



Original	Substitut
9 CBL/SAT	+  Shift + 9
0/11 CBL/SAT	+  Shift + 0

Original	Substitut





Original		Substitut		Original		Substitut	
	Power CD		Power		Play CD		Play / Slow
	CD		Smart / List		>> CD		>> / Tune+
	CH/Disc+ CD		CH+ / Page+		Pause CD		Pause / Step / Freeze
	Vol+ Receiver		Vol+		Stop CD		Stop / Hold
	CH/Disc- CD		CH- / Page-		Search CD		Red / Netflix / Search
	Vol- Receiver		Vol-		Repeat CD		Green / APP / Repeat
	Up CD		Up		Random CD		Blue / Prime Video / Random
	Left CD		Left		Play Mode CD		Yellow / YouTube / Repeat
	Enter CD		OK		1 CD		1
	Right CD		Right		2 CD		2
	Setup CD		Setup / OPT /		3 CD		3
	Down CD		Down		4 CD		4
	Return CD		Back / Return		5 CD		5
	Audio CD		Audio / Lang I/II		6 CD		6
	I<< CD		I<< / Preset-		7 CD		7
	>>I CD		>>I / Preset+		8 CD		8
	<< CD		<< / Tune-		9 CD		9





Original	Substitut
+10/--/--10/D.Tun/ Dimmer CD	Guide / EPG / -/--
0/11 CD	0
CLR/Sleep/12	Fav / Marker / PC

Original	Substitut






Original	Substitut	Original	Substitut
Power Receiver Zone 2	Power	>> Zone 2	>> / Tune+
CH Disc/Album+ Zone 2	CH+ / Page+	Pause Zone 2	Pause / Step / Freeze
Vol+ Zone 2	Vol+	Stop Zone 2	Stop / Hold
CH Disc/Album- Zone 2	CH- / Page-	Movie Tv Zone	Red / Netflix / Search
Vol- Zone 2	Vol-	Music Zone 2	Green / APP / Repeat
Up Zone 2	Up	Game Zone 2	Yellow / YouTube / Repeat
Left Zone 2	Left	Stereo Zone 2	Blue / Prime Video / Random
Enter Zone 2	OK	1 Zone 2	1
Right Zone 2	Right	2 Zone 2	2
Setup Zone 2	Setup / OPT /	3 Zone 2	3
Down Zone 2	Down	4 Zone 2	4
Return Zone 2	Back / Return	5 Zone 2	5
Audio Zone 2	Audio / Lang I/II	6 Zone 2	6
I<< Zone 2	I<< / Preset-	7 Zone 2	7
>>I Zone 2	>>I / Preset+	8 Zone 2	8
<< Zone 2	<< / Tune-	9 Zone 2	9
Play Zone 2	Play / Slow	+10/--/--10/D.Tun/Dimmer Zone 2	Guide / EPG / -/-







Original	Substitut	Original	Substitut
 0/11 Zone 2	 0		
 CLR/Sleep/12	 Fav / Marker / PC		

