 












 
 

 


 











 







Original	Substitut	Original	Substitut
	Power		Power
	[≡]		Text
	16:9		Format
	Mute		Mute
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Digital		Smart
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	TV		TV/R
	Exit		Exit
	Menu		Menu

Original	Substitut	Original	Substitut
	Vol +		Vol +
	Vol -		Vol -
	P +		Ch +
	P -		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	CH Guide		Guide
	[≡i] / Help		Options
















 






 
 


 

 





 
 



 

 
 







	Original	Substitut		Original	Substitut
	[.....]	Subt			
	[≡□] / [▶ ◀]	Stop			
	Input	AV			
	[≡?] / ((↔))	Media			
	[≡X] / ⊕	Shift + Exit			
	[≡↕] / Info	Info			
	Lang I-II	Dual			





Original		Substitut		Original		Substitut	
	Power		Power		7		7
	Viewlink VCR REC		Rec		8		8
	Play		Play		9		9
	<<		<<		0		0
	Pause		Pause		Input		AV
	>>		>>		Lang I-II		Dual
	Stop		Stop				
	TV		Smart				
	Menu		Menu				
	P +		Ch +				
	P -		Ch -				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				

